
Joy Basin Mixer - TR1002



No.	Descrip	otion	Code	Fixings Included	
1	Joy Basir	Mixer	TR1062	YES	
		CONDITIONS: A	IS TESTED UNDER LABORATORY CTUAL FLOW RATE MAY VARY MESTIC SUPPLY AND ACCESSORIE		
			Pressure	: Flow rate	
			0.2bar	5 litres / min	
	(513		0.3bar	5.2 litres / min	
			0.4bar	5.5 litres / min	
			0.5bar	6.4 litres / min	
			1bar	8.9 litres / min	
			2bar	12.6 litres / min	
	Chrome Plated		3bar	15.4 litres / min	

Dimensions - TR1002

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

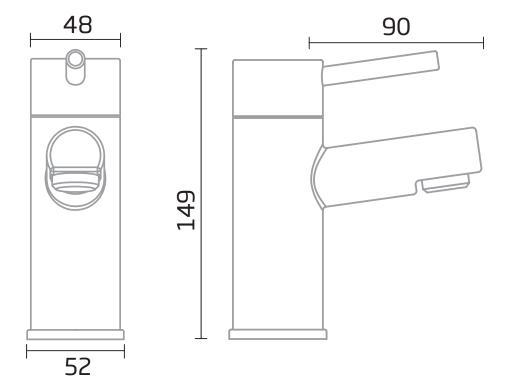

*Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

FAQs

What is the size of the tap tail connection? The tap tails have a standard 15mm pipe compression fitting What bore is the tap tail? The tails have a 10mm internal bore.

What length are the tap tails? The tails are 300mm in length.

Does the tap come fitted with an aerator? Yes, the aerator comes pre-installed but can be replaced.

What is the recommended minimum pressure? 0.2 Bar

Joy Tall Basin Mixer - TR1016



No.	Description	Code	Fixings Included
1	Joy Tall Basin Mixer	TR1016	YES




FLOW RATE DATA IS TESTED UNDER LABORATORY CONDITIONS: ACTUAL FLOW RATE MAY VARY DEPENDING ON DOMESTIC SUPPLY AND ACCESSORIES

Pressure:	Flow Rate:	
0.2bar	3.5 litres / min	
0.3bar	4.5 litres / min	
0.4bar	5.3 litres / min	
0.5bar	6 litres / min	
1bar	8.7 litres / min	
2bar	12.5 litres / min	
3bar	15.5 litres / min	

Dimensions - TR1016

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

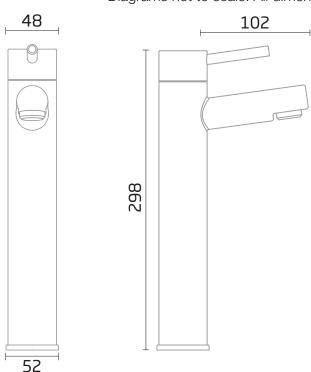

*Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

FAQs

What is the size of the tap tail connection? The tap tails have a standard 15mm pipe compression fitting What bore is the tap tail? The tails have a 10mm internal bore.

What length are the tap tails? The tails are 300mm in length.

Does the tap come fitted with an aerator? Yes, the aerator comes pre-installed but can be replaced. **What is the recommended minimum pressure?** 0.3 Bar

Joy Bath Filler - TR1005



No.	Description	Code	Fixings Included
1	Joy Bath Filler	TR1005	YES





FLOW RATE DATA IS TESTED UNDER LABORATORY CONDITIONS: ACTUAL FLOW RATE MAY VARY DEPENDING ON DOMESTIC SUPPLY AND ACCESSORIES

Pressure:	Flow Rate:	
0.2bar	14.8 litres / min	
0.3bar	15.2 litres / min	
0.4bar	16.7 litres / min	
0.5bar	18.5 litres / min	
1bar	25.7 litres / min	
2bar	32.5 litres / min	

Dimensions - TR1005

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

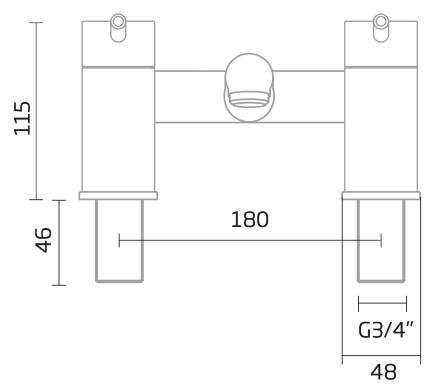

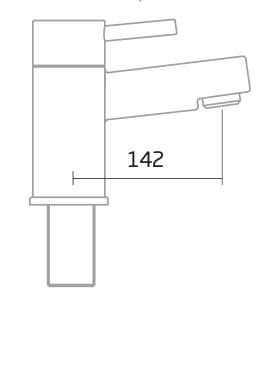

*Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

FAQs

Does the tap come fitted with an aerator? Yes, the aerator comes pre-installed but can be replaced.

What size plumbing fittings are needed for the threaded legs? This product will work with standard 3/4" plumbing fittings.

What is the recommended minimum pressure? 0.1 Bar

Joy Bath Shower Mixer - TR1012



No.	Description	Code	Fixings Included
1	Joy Bath Shower Mixer	TR1012	YES




FLOW RATE DATA IS TESTED UNDER LABORATORY CONDITIONS: ACTUAL FLOW RATE MAY VARY DEPENDING ON DOMESTIC SUPPLY AND ACCESSORIES

Pressure:	Flow Rate:	
0.2bar	8.8 litres / min	
0.3bar	10.9 litres / min	
0.4bar	12.6 litres / min	
0.5bar	14.1 litres / min	
1bar	20 litres / min	
2bar	28.3 litres / min	

Dimensions - TR1012

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

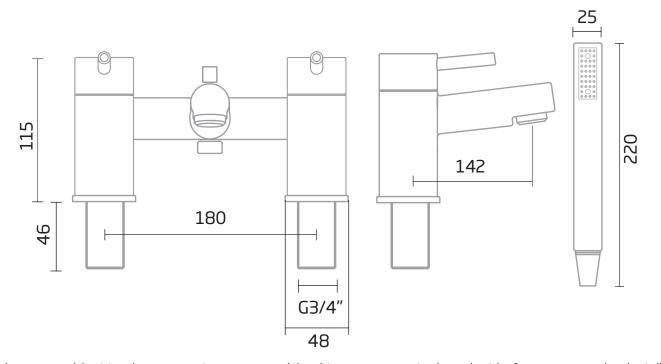

*Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

FAQs

Does the tap come fitted with an aerator? Yes, the aerator comes pre-installed but can be replaced.

What size plumbing fittings are needed for the threaded legs? This product will work with standard 3/4" plumbing fittings.

What size are the connections for the shower hose? The threaded connections on the shower hose are a standard 1/2" BSP connection.

What is the recommended minimum pressure? 0.3 Bar