ROPER RHODES[®]

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

Elate Shower Systems

No.	Description	Code	Fixings Included
1	Elate Dual Function Shower System With Shower Head & Handset	SVSET91	YES
		Inlet Pressure	Flow Rate (I/min)
		0.5bar	15.91
		1bar	22.50
		2bar	31.82
		3bar	35.00
	1	4bar	45.00
		5bar	49.86
		Flow from valve may accessories and don	
Components - SVSET91			

- Dual Function Thermostatic Shower Valve SV2406
- 415mm Brass Fixed Arm SVARM05
- 250mm Stainless Steel Shower Head SVHEAD15
- Air-drive Single Function Shower Handset SVHEAD28
- Brass Shower Hose SVHOSE01
- Outlet Elbow With Shower Handset Holder SVACS08

FAQs

How long is the shower hose? 1.5m What is the minimum pressure for the valve? 0.3bar What is the valve connection size? 1/2"

ROPER RHODES[®]

Elate Shower Systems

No.	Description	Code	Fixings Included
1	Elate Dual Function Shower System With Fixed Head & Riser Rail	SVSET92	YES
		Inlet Pressure	Flow Rate (I/min)
		0.5bar	15.91
		1bar	22.50
N. A.	2bar	31.82	
		3bar	35.00
		4bar	45.00
		5bar	49.86
		Flow from valve ma accessories and de	ay vary depending on omestic supply.

Components - SVSET92

- Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)
- Dual Function Thermostatic Shower Valve SV2406
- 415mm Brass Fixed Arm SVARM05
- 250mm Stainless Steel Shower Head SVHEAD15
- Air-drive Single Function Shower Handset SVHEAD28
- Brass Shower Hose SVHOSE01
- Riser Rail SVRAIL03
- Wall Elbow SVACS06

FAQs

What is the rail fixing centres? 660mm How long is the shower hose? 1.5m What is the minimum pressure for the valve? 0.3bar What is the valve connection size? 1/2"

ROPER RHODES[®]

Elate Shower Systems

No.	Description	Code	Fixings Included
1	Elate Triple Function Shower System With Smartflow Bath Filler	SVSET109	YES
		Inlet Pressure	Flow Rate (I/min)
		1bar	23.60
		2bar	33.37
		3bar	37.00
		4bar	47.20

Flow from valve may vary depending on accessories and domestic supply.

52.30

5bar

Components - SVSET109

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

Triple Function Thermostatic Shower Valve - SV2409

i)

- 415mm Brass Fixed Arm SVARM01
- 250mm Stainless Steel Shower Head SVHEAD15
- Air-drive Single Function Shower Handset SVHEAD28
- Brass Shower Hose SVHOSE01
- Riser Rail SVRAIL03
- Brass Wall Elbow SVACS06
- Smartflow Bath Filler SVACS07

FAQs

What is the rail fixing centres? 660mm How long is the shower hose? 1.5m What is the minimum pressure for the valve? 1bar What is the valve connection size? 1/2"


ROPER RHODES[®]

Thermostatic Concealed Valves

No.	Description		Code	Fixings Included
1	Thermostatic Single Function Valve		SV2413	YES
		Flow from valve may vary depending on	Inlet Pressure	Flow Rate (I/min)
	NIN NIN NIN	accessories and domestic	0.1bar	7.43
	or	supply.	0.2bar	10.50
			0.3bar	12.87
	hot		0.4bar	14.86
	MA		0.5bar	16.61
	cold	1bar	23.50	
		2bar	33.23	
	ROPER RHODES			

Dimensions - SV2413

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

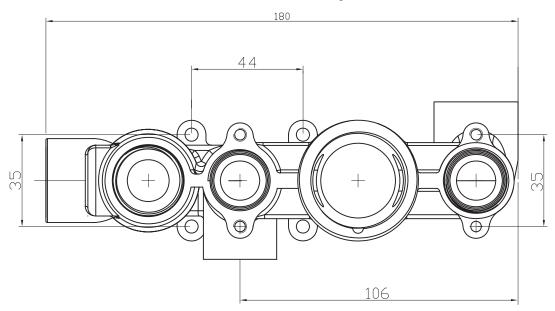

*Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

FAQs

What is included in the valve box? The valve, a cover plate, a set of handles and trim rings.

How many fixing holes does the valve have? Four - two on the bottom and two on top of the valve.

What is the size of the connections? The valve uses 3/4" connections.


ROPER RHODES[®]

accessories and domestic supply.

Thermostatic Concealed Valves

No.	Description	Code	Fixings Included
1	Thermostatic Dual Function Valve	SV2406	YES
		Inlet Pressure	Flow Rate (I/min)
	off	0.3bar	12.32
		0.4bar	14.23
		0.5bar	15.91
		1bar	22.50
	hot	2bar	31.82
		3bar	35.00
	cold **	Flow from valve may	vary depending on

Dimensions - SV2406

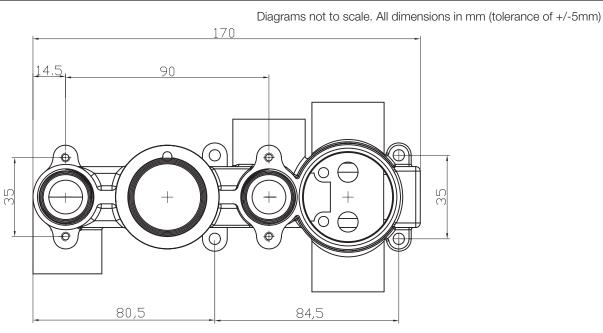

*Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

FAQs

What is included in the valve box? The valve, a cover plate, a set of handles and trim rings. How many fixing holes does the valve have? Four - two on the bottom and two on top of the valve. What is the size of the connections? The valve uses 1/2" connections.


ROPER RHODES[®]

Thermostatic Concealed Valves

No.	Description	Code	Fixings Included
1	Thermostatic Triple Function Valve	SV2409	YES
		Inlet Pressure	Flow Rate (I/min)
		1bar	23.60
		2bar	33.37
	hot _	3bar	37.00
	NIE Y	4bar	47.20
		5bar	52.30
		Flow from valve may accessories and dom	

Dimensions - SV2409

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

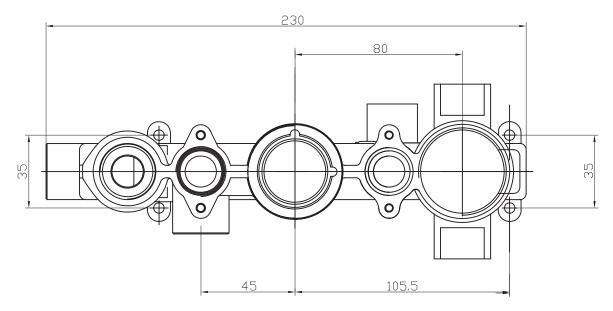

*Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

FAQs

What is included in the valve box? The valve, a cover plate, a set of handles and trim rings. How many fixing holes does the valve have? Four - two on the bottom and two on top of the valve. What is the size of the connections? The valve uses 1/2" connections.

ROPER RHODES[®]


Thermostatic Concealed Valves

No.	Description	Code	Fixings Included
1	Thermostatic Dual Function Valve With Outlet	SV2411	YES
2	Thermostatic Dual Function Valve With Handset Outlet	SV2412	YES
		Inlet Pressure	Flow Rate (I/min)
		0.3bar	12.32
		0.4bar	14.23
	0.5bar	15.91	
		1bar	22.50
		2bar	31.82
		3bar	35.00

Flow from valve may vary depending on accessories and domestic supply.

Dimensions - SV2411 / SV2412

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

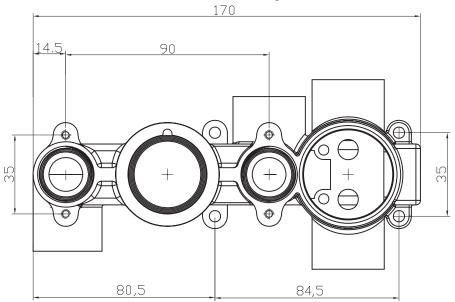

*Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

FAQs

What is included in the valve box? The valve, a cover plate, a set of handles and trim rings. How many fixing holes does the valve have? Four - two on the bottom and two on top of the valve. What is the size of the connections? The valve uses 1/2" connections.