ROPER RHODES[®]

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

Hydra Shower Systems

No.	Description	Code	Fixings Included
1	Hydra Dual Function Shower System With Shower Head & Handset	SVSET74	YES
		Inlet Pressure	Flow Rate (I/min)
		0.5bar	15.91
	Contrary Contrary	1bar	22.50
		2bar	31.82
		3bar	35.00
	T	4bar	45.00
		5bar	49.86
		Flow from valve may accessories and don	

Components - SVSET74

- Dual Function Thermostatic Shower Valve SV1506
- 415mm Brass Fixed Arm SVARM05
- 250mm Stainless Steel Shower Head SVHEAD15
- Air-drive Single Function Shower Handset SVHEAD28
- Brass Shower Hose SVHOSE01
- Outlet Elbow With Shower Handset Holder SVACS08

FAQs

How long is the shower hose? 1.5m What is the minimum pressure for the valve? 0.3bar What is the valve connection size? 1/2"

ROPER RHODES[®]

Hydra Shower Systems

No.	Description	Code	Fixings Included
1	Hydra Dual Function Shower System With Fixed Head & Riser Rail	SVSET115	YES
		Inlet Pressure	Flow Rate (I/min)
		0.5bar	15.91
		1bar	22.50
		2bar	31.82
	A	3bar	35.00
		4bar	45.00

Flow from valve may vary depending on accessories and domestic supply.

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

5bar

49.86

Components - SVSET115

- Dual Function Thermostatic Shower Valve SV1506
- 415mm Brass Fixed Arm SVARM05
- 250mm Stainless Steel Shower Head SVHEAD15
- Air-drive Single Function Shower Handset SVHEAD28
- Brass Shower Hose SVHOSE01
- Riser Rail SVRAIL03
- Wall Elbow SVACS06

FAQs

What is the rail fixing centres? 660mm How long is the shower hose? 1.5m What is the minimum pressure for the valve? 0.3bar What is the valve connection size? 1/2"

ROPER RHODES[®]

Hydra Shower Systems

No.	Description	Code	Fixings Included
1	Hydra Triple Function Shower System With Smart- flow Bath Filler SVSET99 YE		YES
		Inlet Pressure	Flow Rate (I/min)
		1bor	22.60



Inlet Pressure	Flow Rate (l/min)
1bar	23.60
2bar	33.37
3bar	37.00
4bar	47.20
5bar	52.30

Flow from valve may vary depending on accessories and domestic supply.

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

Components - SVSET99

- Triple Function Thermostatic Shower Valve SV1709
- 415mm Brass Fixed Arm SVARM01
- 250mm Stainless Steel Shower Head SVHEAD15
- Air-drive Single Function Shower Handset SVHEAD28
- Brass Shower Hose SVHOSE01
- Riser Rail SVRAIL03
- Brass Wall Elbow SVACS06
- Smartflow Bath Filler SVACS07

FAQs

What is the rail fixing centres? 660mm How long is the shower hose? 1.5m What is the minimum pressure for the valve? 1bar What is the valve connection size? 1/2"


ROPER RHODES[®]

Thermostatic Concealed Valves

No.	Descrip	Description		Fixings Included
1	Thermostatic Single	Thermostatic Single Function Valve		YES
	(martin)	Flow from valve may vary depending on	Inlet Pressure	Flow Rate (I/min)
	of B War	accessories and domestic	0.1bar	7.43
	on	supply.	0.2bar	10.50
			0.3bar	12.87
	hot		0.4bar	14.86
			0.5bar	16.61
	cold		1bar	23.50
	ROPER RHODES		2bar	33.23
	ANNOUES .			

Dimensions - SV1513

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

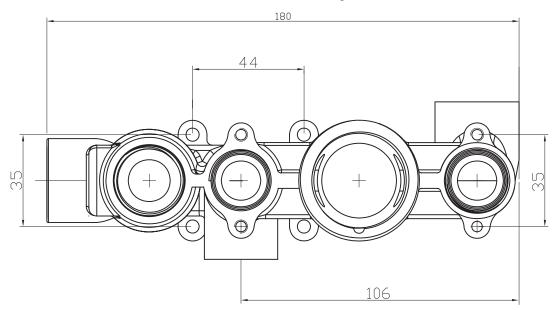

*Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

FAQs

What is included in the valve box? The valve, a cover plate, a set of handles and trim rings.

How many fixing holes does the valve have? Four - two on the bottom and two on top of the valve.

What is the size of the connections? The valve uses 3/4" connections.

ROPER RHODES[®]


Thermostatic Concealed Valves

No.	Description	Code	Fixings Included
1	Thermostatic Dual Function Valve	SV1506	YES
		Inlet Pressure	Flow Rate (I/min)
	Contraction of the second s	0.3bar	12.32
	A IN	0.4bar	14.23
	in a start star	0.5bar	15.91
		1bar	22.50
	hot _	2bar	31.82
		3bar	35.00
	cole	Flow from valve may	vary depending on

Dimensions - SV1506



accessories and domestic supply.

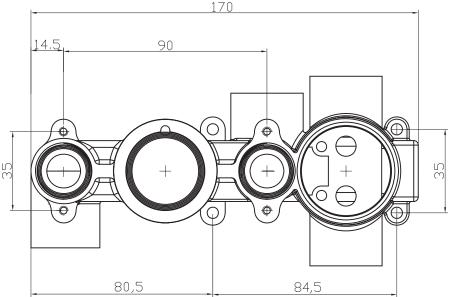

*Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

FAQs

What is included in the valve box? The valve, a cover plate, a set of handles and trim rings. How many fixing holes does the valve have? Four - two on the bottom and two on top of the valve. What is the size of the connections? The valve uses 1/2" connections.


ROPER RHODES[®]

Thermostatic Concealed Valves

No.	Description	Code	Fixings Included
1	Thermostatic Triple Function Valve	SV1509	YES
		Inlet Pressure	Flow Rate (I/min)
		1bar	23.60
	on l	2bar	33.37
		3bar	37.00
		4bar	47.20
		5bar	52.30
		Flow from valve may v accessories and dome	

Dimensions - SV1709

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

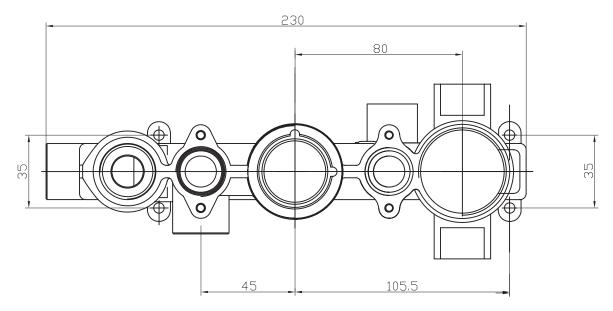

*Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

FAQs

What is included in the valve box? The valve, a cover plate, a set of handles and trim rings. How many fixing holes does the valve have? Four - two on the bottom and two on top of the valve. What is the size of the connections? The valve uses 1/2" connections.

ROPER RHODES[®]

Thermostatic Concealed Valves

No.	Description	Code	Fixings Included
1	Thermostatic Dual Function Valve With Outlet	SV1511	YES
2	Thermostatic Dual Function Valve With Handset Outlet	SV1512	YES
		Inlet Pressure	Flow Rate (I/min)
		0.3bar	12.32
		0.4bar	14.23
	un SCIETANNES	0.5bar	15.91
		1bar	22.50




Flow Rate (I/min)
12.32
14.23
15.91
22.50
31.82
35.00

Flow from valve may vary depending on accessories and domestic supply.

Dimensions - SV2511 / SV2512

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

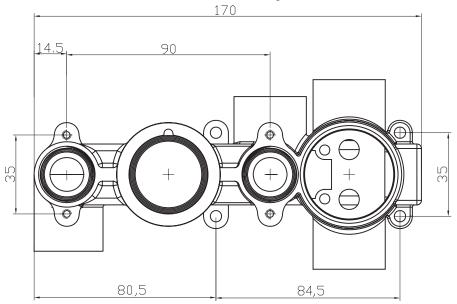

*Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

FAQs

What is included in the valve box? The valve, a cover plate, a set of handles and trim rings. How many fixing holes does the valve have? Four - two on the bottom and two on top of the valve. What is the size of the connections? The valve uses 1/2" connections.