





Scan to view installation video

FLOW RATE DATA IS TESTED UNDER  
LABORATORY CONDITIONS: ACTUAL  
FLOW RATE MAY VARY DEPENDING ON  
DOMESTIC SUPPLY AND ACCESSORIES

Minimum Pressure:	1 BAR
Pressure:	Flow Rate (l/min)
1 BAR	10.9
2 BAR	15.6
3 BAR	19.2
4 BAR	21.7

Dimensions

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

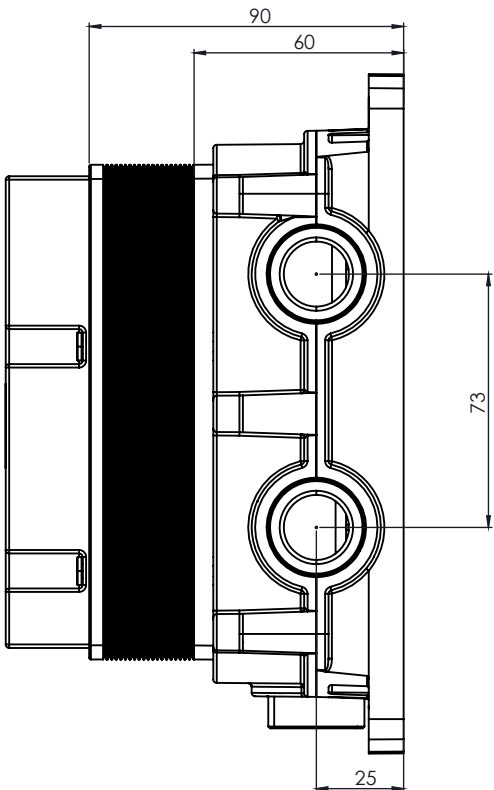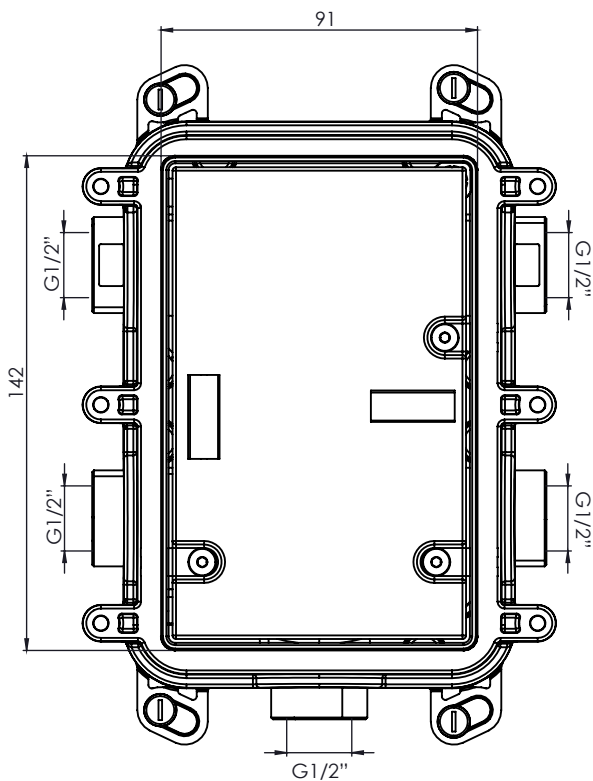

FAQs

- What is the size of the connections?** The valve uses 1/2" connections for all inlets and outlets
- Can I have both shower options on at the same time?** No, only one shower outlet can be used at any one time
- What size Pipework do I need?** 15mm
- What is the minimum and maximum cavity depth for mounting the shower valve?** Min: 60mm - Max: 90mm
- Does the valve include isolation points?** Yes, the valve can be isolated on the temperature module
- What is the recommended operating pressure?** 1.0bar
- Can the system be mounted vertically and horizontally?** No, this system is designed for vertical installation only