ROPER RHODES[®]

Storm Shower Systems

No.	Description	Code	Fixings Included
1	Storm Dual Function Concealed Shower System	SVSET43	YES
		FLOW RATE DATA IS TESTED UNDER LABORATORY CONDITIONS: ACTUAL FLOW RATE MAY VARY DEPENDING ON DOMESTIC SUPPLY AND ACCESSORIES	
		Inlet Pressure	Flow Rate (I/min)
		1bar	19.16
		2bar	27.46
		3bar	33.61
		4bar	38.88
		5bar	46.12

SVSET43

FAQs

How many fixing holes does the valve have?Four - two on the bottom and two on top of the valve.What is the wall elbow made out of? Chrome-plated brassWhat is the minimum pressure for the valve? 0.5barHow long is the shower hose? 1.5m


Components

Dual Function Thermostatic Shower Valve - SV2205 190mm Aerial Solid Brass Shower Head - SVHEAD32 Air-Drive 5 Function Shower Handset - SVHEAD29 Easy Clean PVC Shower Hose - SVHOSE03 Brass Wall Elbow And Shower Handset Holder - SVACS11

ROPER RHODES[®]

Storm Shower Systems

No.	Description	Code	Fixings Included
1	Storm Dual Function Shower System With Accessory Shelf	SVSET37	YES
		FLOW RATE DATA IS TESTED UNDER LABORATORY CONDITIONS: ACTUAL FLOW RATE MAY VARY DEPENDING ON DOMESTIC SUPPLY AND ACCESSORIES	
		Inlet Pressure	Flow Rate (I/min)
		1bar	23.40
		2bar	33.09
		3bar	34.80
		4bar	46.80
		5bar	51.85
Compon	ents - SVSET37	L	

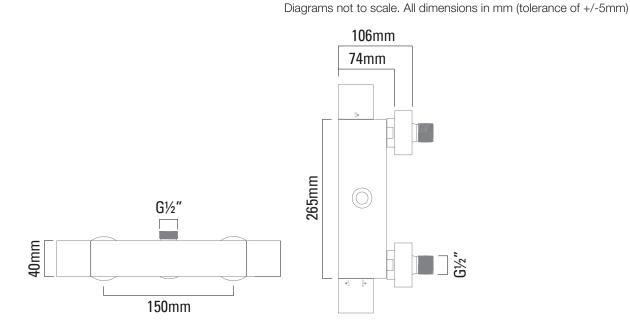

FAQs

How tall is the riser rail? Adjustable from 958 - 1440mm

How long is the shower hose? 1.5m

What is the minimum pressure for the valve? 1.0bar

What is the distance between the valve front and the wall when mounted? 106mm

What is the total bar valve height? 40mm

What is the valve connection size? 1/2"

What is the distance between the wall bracket and the head centre? 400mm


Surface Mounted Top Outlet Bar Valve (with Quick Fixing Kit) - SV2207 Height Adjustable Rigid Riser Rail with Diverter - SVARM07 220mm Shower Head - SVHEAD18 Single Function Shower Handset - SVHEAD24 Brass Shower Hose - SVHOSE01

ROPER RHODES[®]

Storm Shower Systems

No.	Description	Code	Fixings Included
1	Storm Dual Function Shower System	SVSET02	YES
		LABORATORY CONDI RATE MAY VARY DEPI	IS TESTED UNDER TIONS: ACTUAL FLOW ENDING ON DOMESTIC ACCESSORIES
		Inlet Pressure	Flow Rate (I/min)
		1bar	23.20
		2bar	32.80
		3bar	34.90
		4bar	46.40
		5bar	51.41
SVSET02			

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

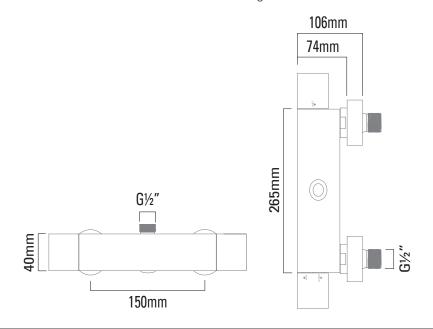

FAQs

How tall is the riser rail? Adjustable from

How long is the shower hose? 1.5m

What is the minimum pressure for the valve? 1.0bar

What is the distance between the valve front and the wall when mounted? 106mm

What is the total bar valve height? 40mm

What is the valve connection size? 1/2"

What is the distance between the wall bracket and the head centre? 400mm

Thermostatic Top Outlet Bar Valve - SV2207

Components

Height Adjustable Rigid Riser Rail with Diverter - SVARM07 220mm Shower Head - SVHEAD18 Single Function Shower Handset - SVHEAD24 Brass Shower Hose - SVHOSE01

ROPER RHODES®

Storm Shower Systems

No.	Description	Code	Fixings Included
1	Thermostatic Single Function Valve	SV2204	YES
		LABORATORY COND RATE MAY VARY DEP	IS TESTED UNDER ITIONS: ACTUAL FLOW ENDING ON DOMESTIC ACCESSORIES
		Inlet Pressure	Flow Rate (I/min)
	H m	0.2bar	10.32
		0.5bar	13.65
		1bar	19.65
	-	2bar	28.55


Dimensions - SV2204

Handle shape may vary.

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

34.07

3bar

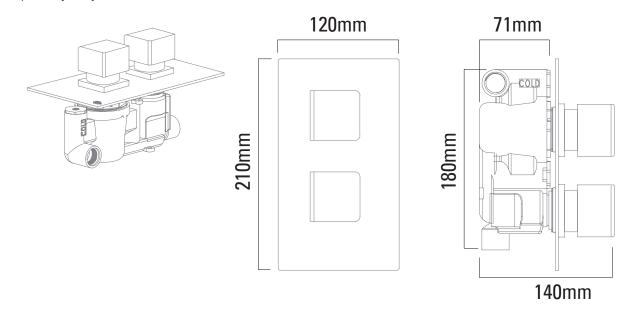

*Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

FAQs

How many fixing holes does the valve have? Two - one on the bottom and one on top of the valve.

What is included in the valve box? The valve, a cover plate, a set of handles and trim rings.

What is the size of the connections? The valve uses 1/2" connections

ROPER RHODES[®]

Storm Shower Systems

No.	Description	Code	Fixings Included
1	Thermostatic Dual Function Valve	SV2205	YES
		FLOW RATE DATA IS TESTED UNDER LABORATORY CONDITIONS: ACTUAL FLOW RATE MAY VARY DEPENDING ON DOMESTIC SUPPLY AND ACCESSORIES	
	1 m.	Inlet Pressure	Flow Rate (I/min)
		0.5bar	12.75
		1bar	19.16
		2bar	27.46


Dimensions - SV2205

Handle shape may vary.

Diagrams not to scale. All dimensions in mm (tolerance of +/-5mm)

3bar 4bar 33.61

38.88

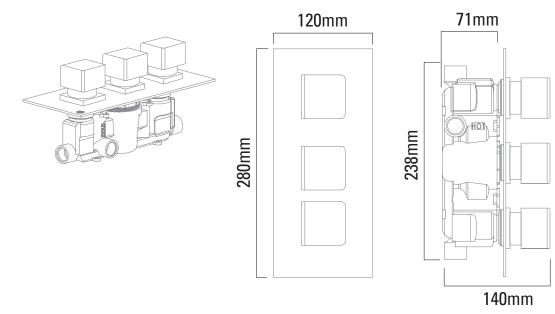

*Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

FAQs

How many fixing holes does the valve have? Four - two on the bottom and two on top of the valve.

What is included in the valve box? The valve, a cover plate, a set of handles and trim rings.

What is the size of the connections? The valve uses 1/2" connections