

Bathtub Installation Guide

Installation and Aftercare Instructions



IMPORTANT: PLEASE CAREFULLY READ THE INSTRUCTIONS IN FULL BEFORE INSTALLATION



⚠ WARNINGS ⚠

- This product must be installed by a qualified fitter or plumber in accordance with and meet the requirements of Water Supply (Water Fittings) Regulations 1999, the Water Supply (Water Fittings) (Scotland) Byelaws 2014 and the Water Supply (Water Fittings) Regulations (Northern Ireland) 2009.
- Prior to installation please ensure that your plumbing system is adequate and that you have sufficient space to complete the installation.
- Prior to installation conduct a visual inspection of bath tub to ensure there are no defects or damage.
- Due to the size and weight of the product, a two person lift is required. Please ensure to use proper lifting techniques.
- Do not stand in the bath tub until installation has been completed.
- The bath tubs should not be modified in any way as this will invalidate the warranty.
- When placing the bath tub on it's side or top, ensure suitable protection, such as a mat, is used to prevent the bath from being damaged.
- Before drilling into wall, check for hidden electrical cables, wires and water pipes.
- When using a drill, ensure to wear the correct PPE, especially eye, ear and hand protection.
- Unplug any mains equipment after use and keep electrical equipment away from sources of water at all times.
- Remove all packaging before installation.


Please note: the bath tub pictured in the following fitting instructions is indicative only. The bath tub being fitted may differ in appearance and proportions.

Preparing the Installation Area

This bathtub is designed to be fitted into the corner or alcove of a bathroom. If fitted into an alcove, ensure the alcove is wide enough to fit the bath. Always ensure the tap deck is positioned against a wall.

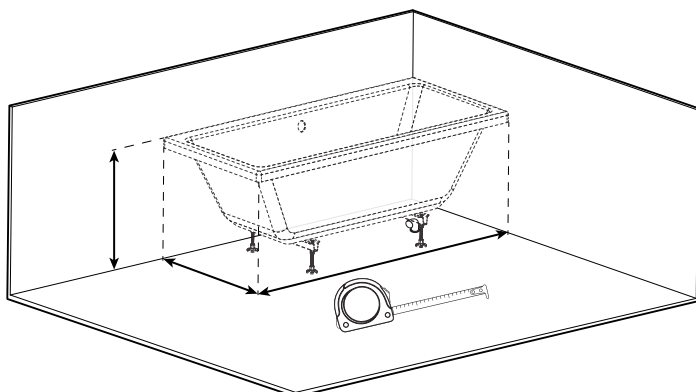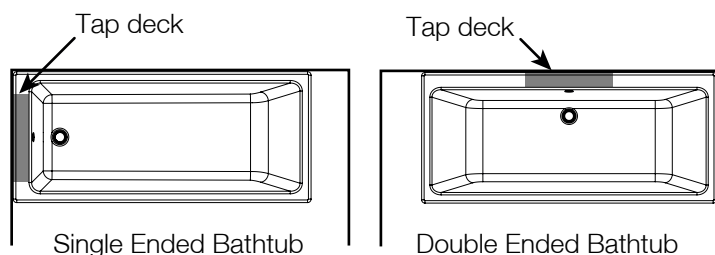


When the bath is being installed on a suspended wooden floor, ensure that the floor is strong enough to carry the weight of a water filled tub. Do not assume the floor is strong enough and use a structural engineer to perform a risk assessment if required. See the product datasheet for the overall capacity of your bath.

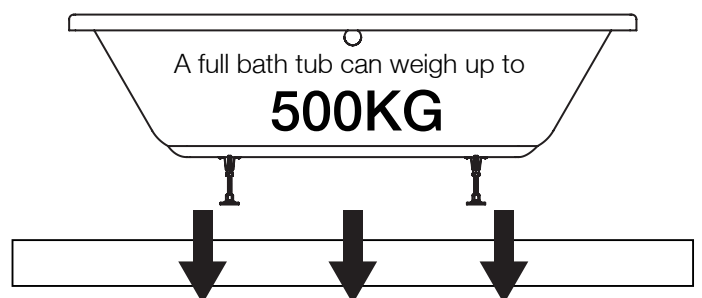


- Unpackage and measure the bathtub, ensuring it will fit in the desired location.
- Ensure that the position of the waste and intended position of the bathtub are compatible, and that the intended position of the pipework will not be blocked by any internal structures of the bathtub.
- Check the bath panel length and height is compatible with the bath.

Contents

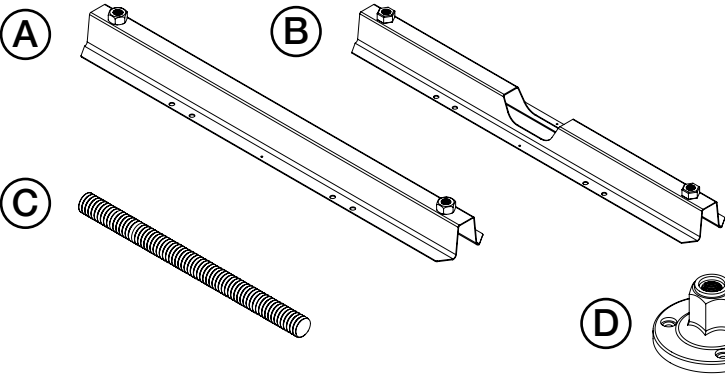


ITEM	QTY	DESCRIPTION
A	1	FOOT CHANNEL
B	1	FOOT CHANNEL WITH CUTOUT
C	4	THREADED ROD
D	4	FOOT BASE
E	4	LOCKING NUT
F	16	FOOT CHANNEL SCREWS (M3.5 X 15mm)
G	12	FLOOR & WALL SCREWS (M3.5 x 30mm)

1. Attach feet to underside of bathtub

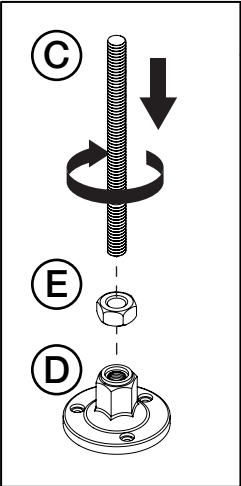

Assemble 4 x feet as shown in the diagram.





Ensure the threaded rod is screwed all the way into the foot base.

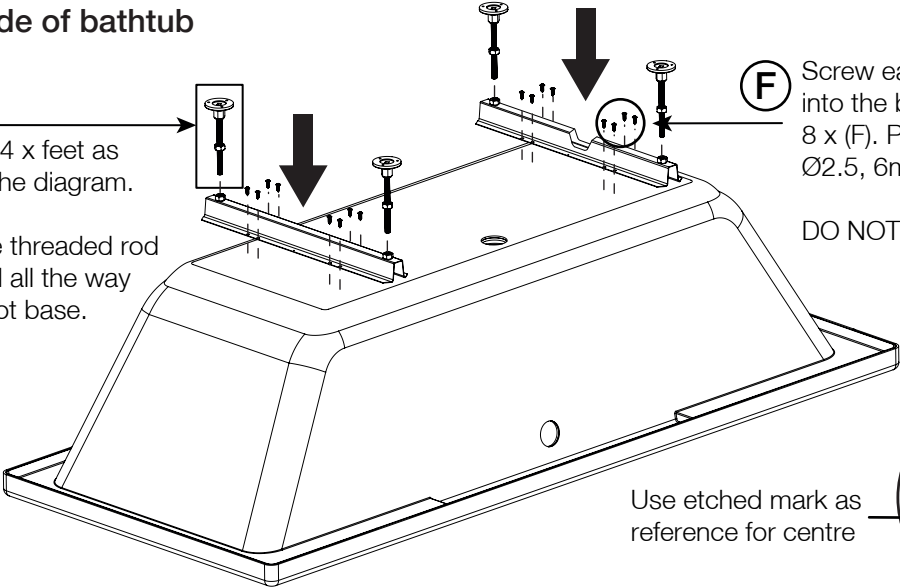

Screw each foot channel into the baseboard with 8 x (F). Pilot drill holes Ø2.5, 6mm deep.

DO NOT OVERTIGHTEN

Use etched mark as reference for centre

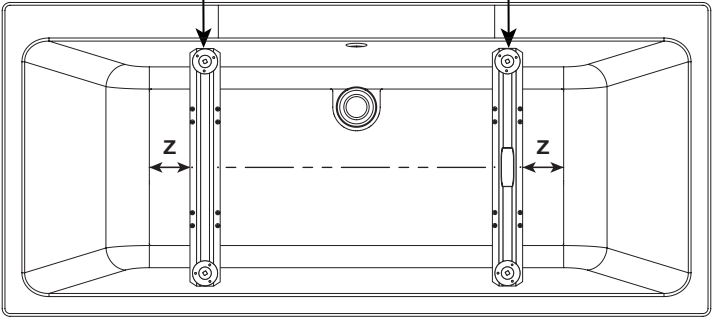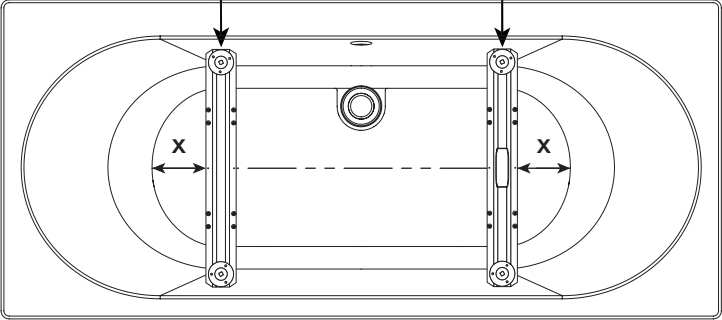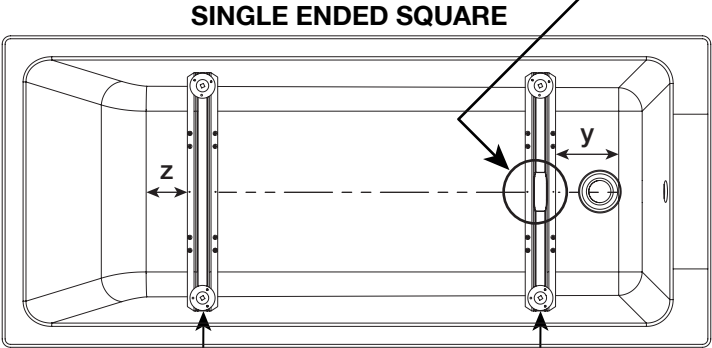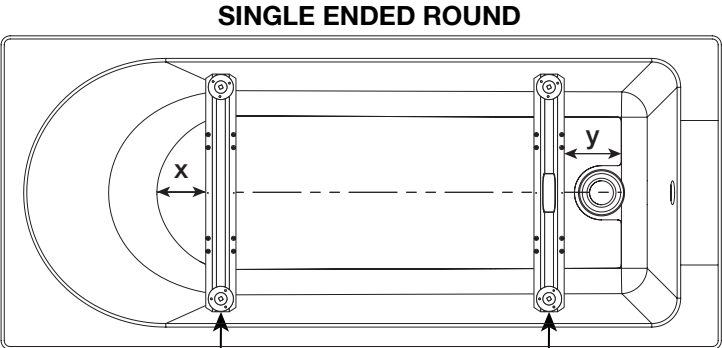



x = 140mm y = 120mm z = 80mm

Position the foot channels (A) & (B) as shown above, distance (x), (y) or (z) away from the baseboard ends. Ensure the foot channels are aligned with the middle of the baseboard. Use the etched line in the middle of the foot channels for reference.

For single ended bathtubs - The foot channel with cutout (B) is located closest to the bath waste to prevent the P-trap and waste pipe clashing with the foot when fitted.

2. Make Plumbing Connections


- A bathtub overflow kit with compatible bathtub waste, and a low profile P-trap are all required for installation.
- Additionally a 40mm flexible pipe may be required to make the connection between the P-trap and the waste, dependant upon the position of the waste pipe.
- All plumbing fittings must be purchased separately and must be suitable for the specific requirements of the installation.
- Ensure there is adequate gap between the base of the P-trap and the floor to prevent damage during installation.

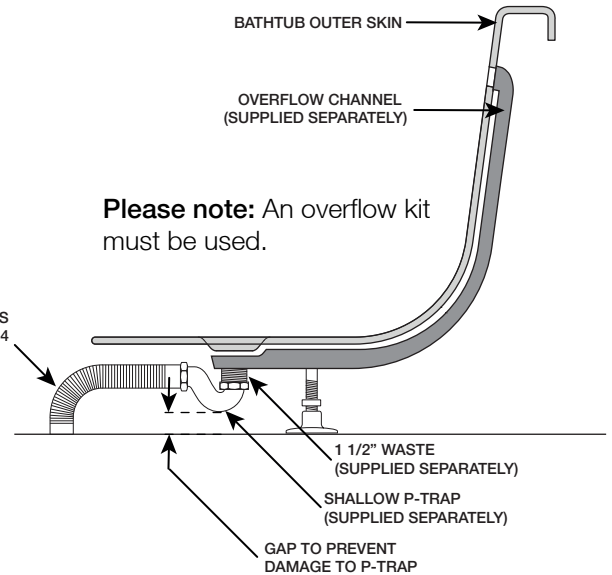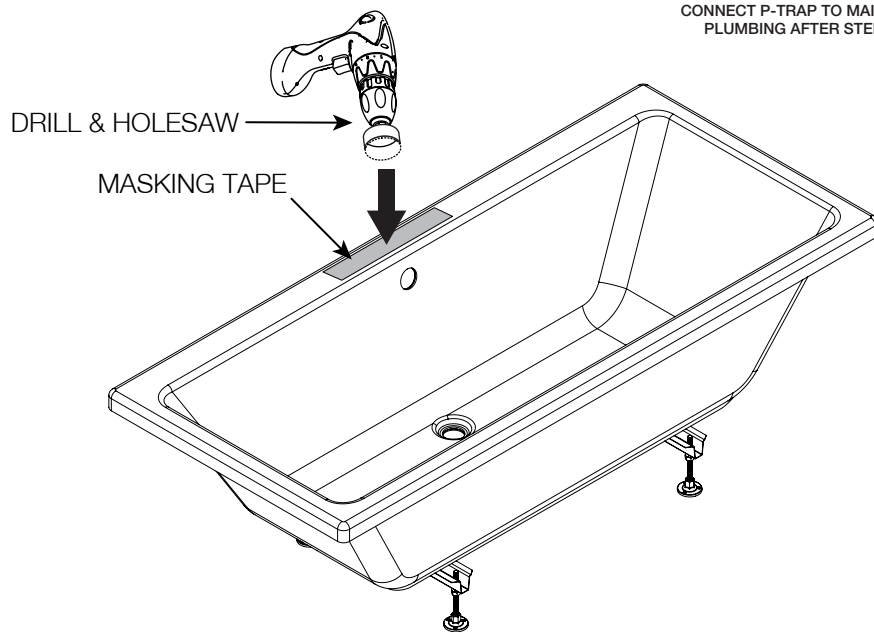

When fitting taps to the bathtub:

- Only mount taps over the tapdeck area, which is centred above the overflow.
- Apply masking tape to the bathtub surface before drilling. Drill down onto the acrylic surface to prevent surface damage.
- Follow the steps in the tap fitting instructions.


3. Fit battens to wall

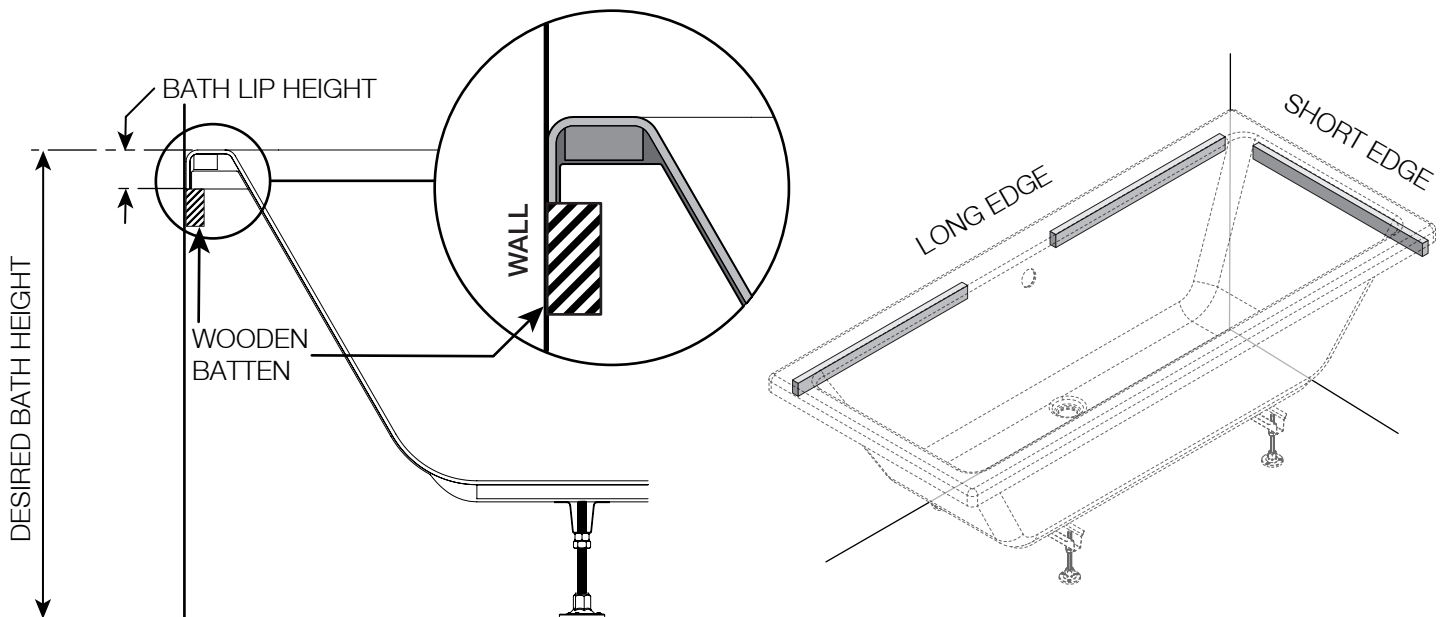

- Determine the desired bath height that is suitable for all necessary plumbing, and the bath panel.
- Measure the bath lip height.
- Attach wood battens (not provided) at the correct height so the bath lip will sit on top of the wood battens.
- Ensure the battens are positioned so they don't clash with the plumbing.


4. Level Foot Connections

- Apply a layer of silicone adhesive to all bath edges that sit against the wall.
- Adjust each foot so the bath is level at the desired height. Check the bathtub is level using a spirit level or similar.
- Place the bath in the desired location so the bath lip rests on the wood battens.
- Press the bath against the walls to ensure the silicone adhesive creates a strong bond between the bath edges and wall.
- Connect the P-trap and taps to the mains plumbing. Pour water into the bath with the click waste open and check to see if there are any leaks from the plumbing connections. It is also recommended to check the connection of the click waste by closing the click waste and slightly filling up the bath and checking to see whether any water drains from the bath unexpectedly.

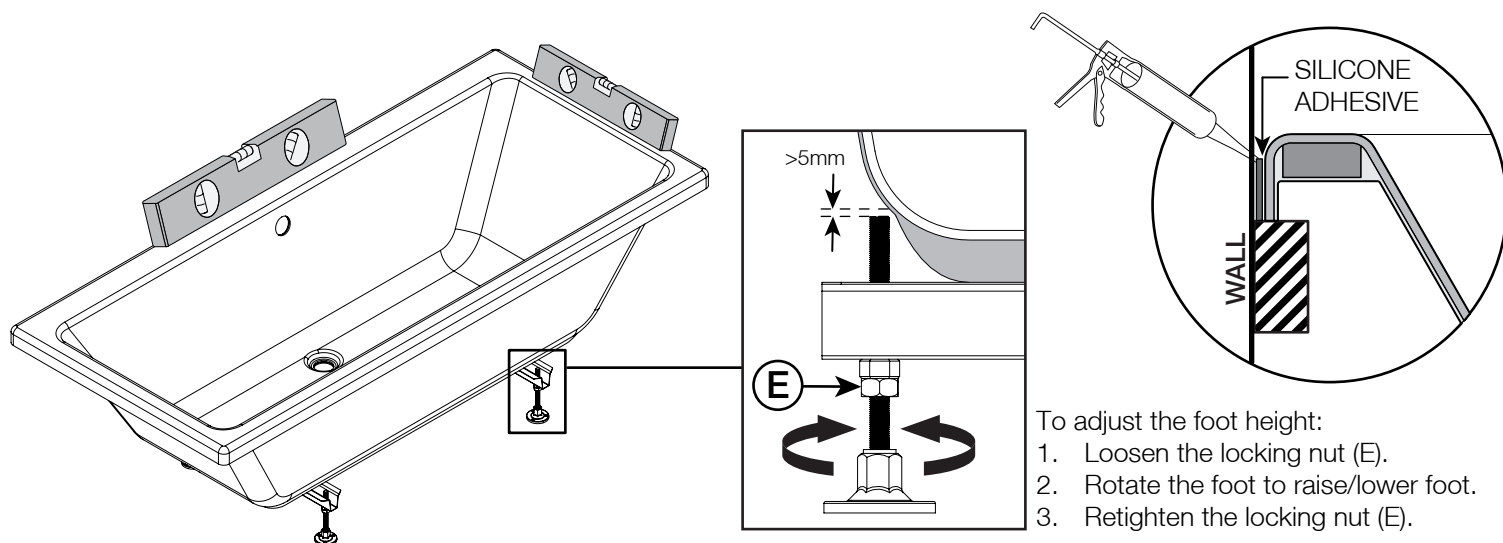

Ensure the threaded rods (C) do not clash with the bathtub side wall after adjusting the bathtub feet height, it is recommended to leave a minimum gap of 5mm between the top of the threaded rod and the bathtub side wall.

5. Fixing in place

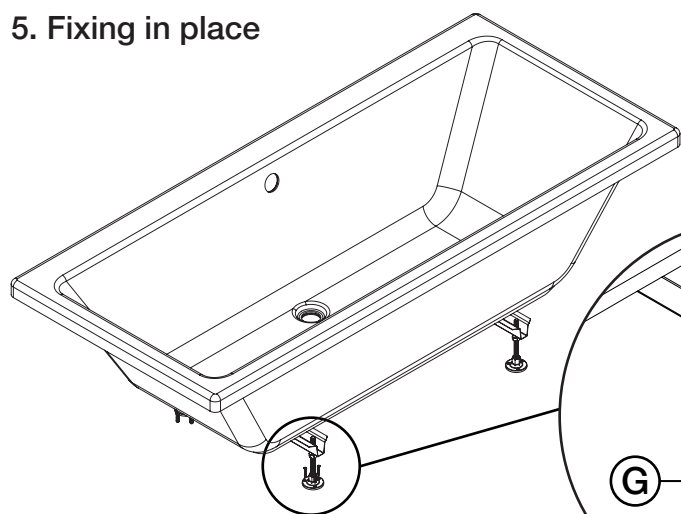


Once the bath is correctly positioned, plumbing is connected and the bath is levelled to the correct height, fix the feet to the floor.

Note: The screws provided (G) are suitable for wood flooring. For any other floor material use specialist screws.

Use 3 x floor screws (G) to secure each foot.

DO NOT OVERTIGHTEN SCREWS



- Fit the bath panels under the bath lip. See bath panel or bath panel installation kit instructions for more information.
- After fitting the bath panels seal the gap between the walls and bathtub, the gap between the bath panels and the floor and wall, and the gap between the bath panels using a silicone sealant. It is recommended to fill the bathtub with water to form a solid bond.
- Leave the bath tub for 24 hours before use to allow the sealant to cure fully.

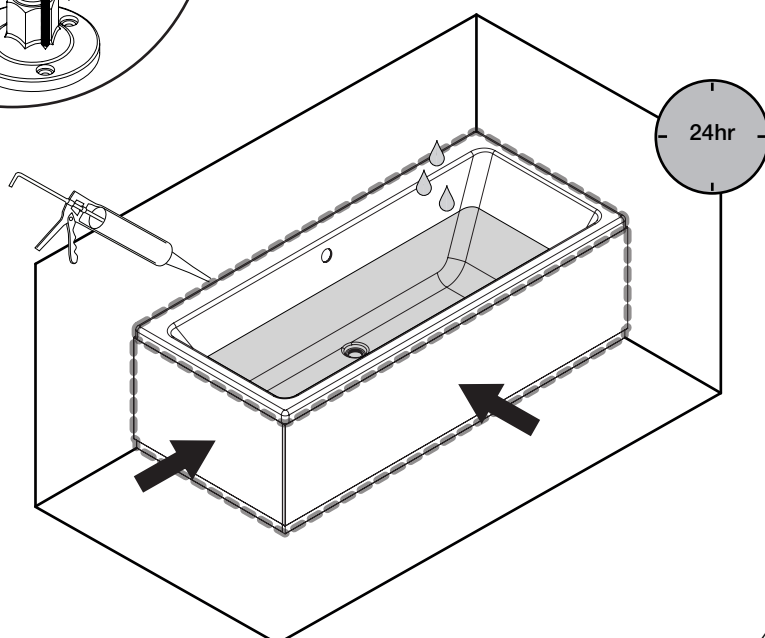

6. Tiling

IMPORTANT

When tiling around the bath tub, it is important to leave a small gap between the tiles and the bathtub to enable sealant to make a water tight seal. Alternatively the bath tub can be installed in front of a finished tiled wall.

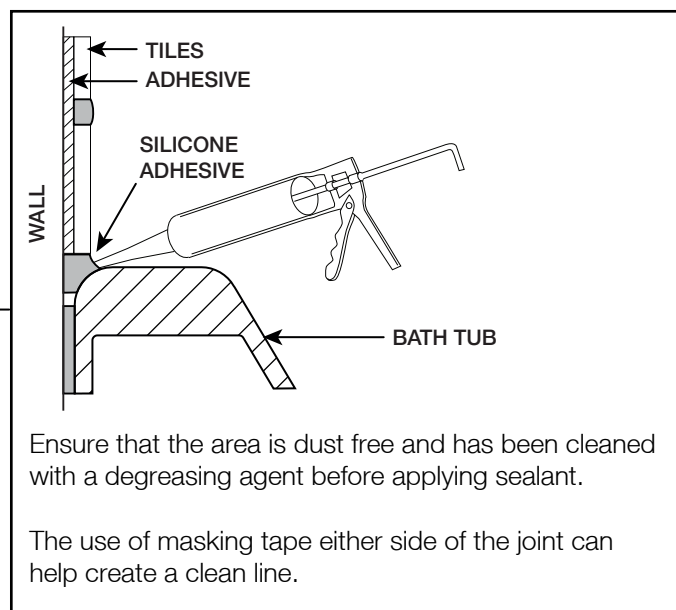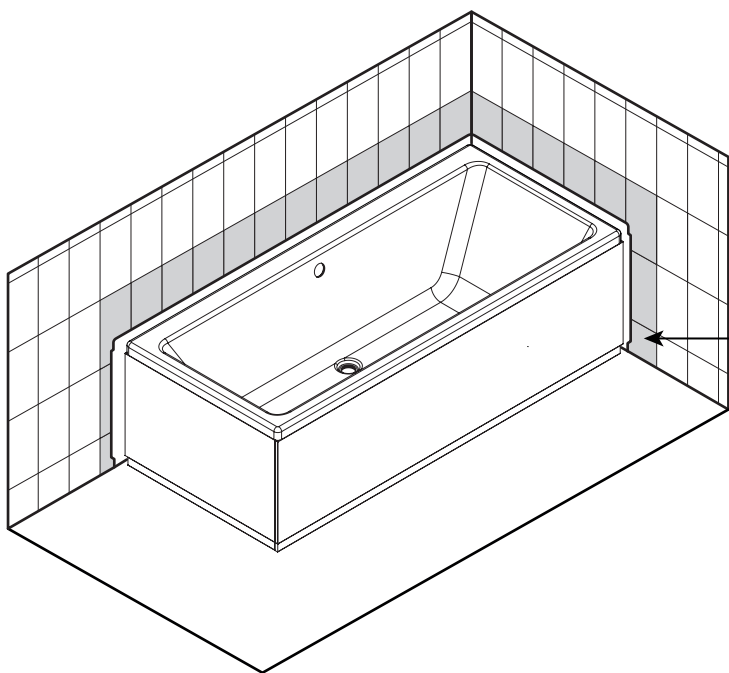

Aftercare Instructions



To preserve the finish of your bath tub, regularly clean with a soft cloth and warm soapy water.



Do **NOT** use abrasive cleaning agents. Take care using any solvents around the bath, paint stripper and nail polish will damage the bath.



Do **NOT** scrub or scour



Be aware that highly coloured bath oils, bathing products and hair dyes near bath surfaces may stain the bathtub surfaces.



Do **NOT** stand in the bath with shoes on, especially shoes with heels.



Ensure that there are no constant drips from the bath filler as this could lead to limescale build up on the bath surface



Do **NOT** sit or lean on the edge of the bath tub.



Avoid using nail polish remover (acetone), or ammonia based products near the bath as they can damage the bathtub surface.

For any further assistance, please contact our tech support team at: 01225 303900.

We reserve the right to amend the specification of its products at any time if an opportunity to improve the product occurs. All dimensions are approximate and are quoted within reasonable tolerances.