

Bath Slotted Click Waste

ROPER RHODES

BATH

Installation and Aftercare Instructions

Please read completely first before commencing and retain for future reference

! WARNINGS !


- This product must be installed by a qualified fitter or plumber in accordance with and meet the requirements of Water Supply (Water Fittings) Regulations 1999, the Water Supply (Water Fittings) (Scotland) Byelaws 2014 and the Water Supply (Water Fittings) Regulations (Northern Ireland) 2009.

- Prior to installation please ensure that your plumbing system is adequate and that you have sufficient space to complete the installation.


- Prior to installation we recommend a visual inspection of the product to ensure there are no manufacturing defects or damage during transit.

Installation Instructions

Please note: PTFE tape and suitable sealing agent are recommended to be used.

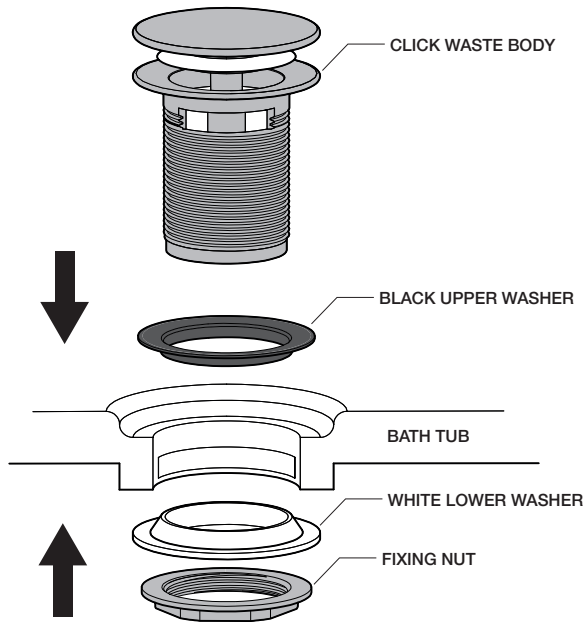

For the best flow rate from the overflow channel, ensure that the overflow slots in the waste and bath tub waste are fully aligned.

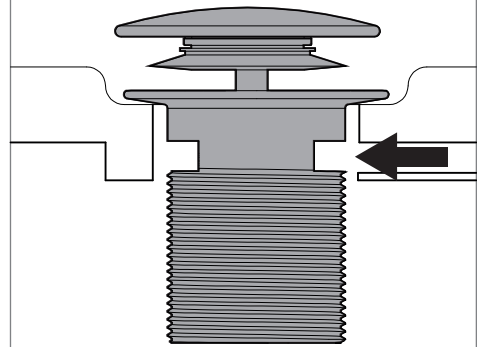

Please note: an overflow channel is to be used to prevent overflowing in an emergency and not to be relied upon when filling a bathtub.

Aftercare Instructions



To preserve the finish of your bath tub, clean with a soft cloth and warm soapy water.



Do **NOT** scrub, scour or use abrasive cleaning agents. Take care using any solvents around the bath, paint stripper and nail polish will damage the bath.