

Technical Data Sheet

ROPER RHODES®

SYSTEM SOLID SURFACE WORKTOP

What's in the box: 1x SYS5SSWKIT, SYS6SSWKIT, SYS8SSWKIT, SYS5SSBMKIT, SYS6SSBMKIT, SYS8SSBMKIT, SYS6SSBMKIT, SYS6SSBMKIT, SYS8SSBMKIT

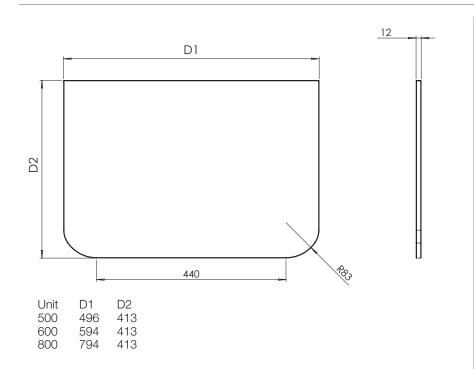

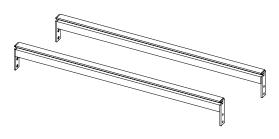

Important note

Support braces are included with the worktop.

These must be cut to length before installation.

| Unit | Recommended brace length |
|------|--------------------------|
| 500 | 444mm |
| 600 | 546mm |
| 800 | 746mm |

Diagrams not to scale All dimensions in mm Tolerance of +/-5mm

Materials

Worktop: Solid Surface

**Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

Solid Surface Information

Has many names including:

- Corian
- LG Hi-macs

A homogenous compound mixture of polyester and aluminium trihydrate (derived from a natural Bauxite ore). This means it is the same material all the way through, so can be cut and sanded back to a perfect finish. Aluminium trihydrate is moulded, vacuum treated and then finished by hand to create a perfectly smooth matt finish which is highly dimensionally accurate. Can be sanded and refinished should any stains occur due to misuse. Can be patch repaired by simply sanding back the affected area.

Material Benefits:

- Point impacts (255g ball dropped from 610mm)
- Stain resistant
- Colourfast
- Temperature resistance

FAQs

Q: Are the worktops pre-cut for tap and waste hole?

Q: Are the worktops reversible?

Q: Can I use these worktops on other ranges?

Q: How do I install the support braces?

Q: How many support braces do I need?

A: No, they are plain and should be cut according to basin / tap selected. Instruction supplied with worktops to detail

A: No, the top (main finish) is polished. Underside is unfinished.

A: Our worktops are designed to be a perfect fit, however it is possible to cut down and repolish edges if required.

A: Cut the braces to length and apply them to the unit using the included fixings. More details are shown in the instructions.

A: For 500, 600 and 800 worktops, 2x support braces are needed for one worktop.