


Technical Data Sheet


ROPER RHODES®

SCHEME SOLID SURFACE WORKTOP

What's in the box: 1x SCH5SSWKIT, SCH6SSWKIT, SCH8SSWKIT, SCH10SSWKIT, SCH12SSWKIT, SCH5SSBMKIT, SCH6SSBMKIT, SCH8SSBMKIT, SCH10SSBMKIT, SCH12SSBMKIT

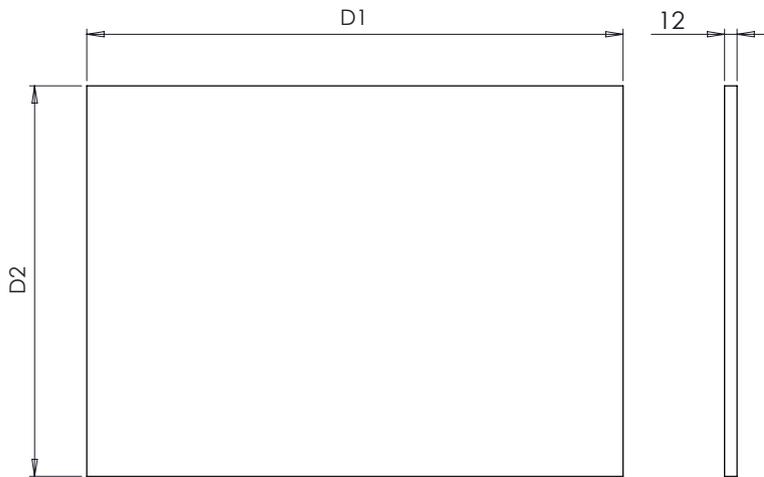

| Unit | D1 | D2 |
|------|------|-----|
| 500 | 515 | 378 |
| 600 | 602 | 392 |
| 800 | 802 | 392 |
| 1000 | 1002 | 392 |
| 1200 | 1202 | 392 |

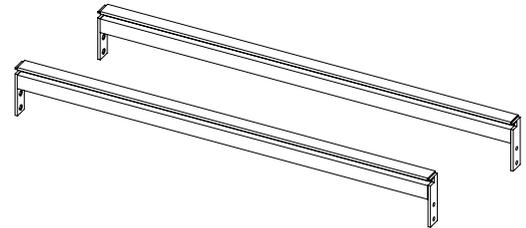

Important note

Support braces are included with the worktop.

These can be installed without needing to be cut to length.

Diagrams not to scale
All dimensions in mm
Tolerance of +/-5mm

Materials

Basin: Isocast

**Dimensions are subject to change, customers are advised to measure actual product before commencing installation.

Solid Surface Information

Has many names including:

- Corian
- LG Hi-macs

A homogenous compound mixture of polyester and aluminium trihydrate (derived from a natural Bauxite ore). This means it is the same material all the way through, so can be cut and sanded back to a perfect finish. Aluminium trihydrate is moulded, vacuum treated and then finished by hand to create a perfectly smooth matt finish which is highly dimensionally accurate. Can be sanded and refinished should any stains occur due to misuse. Can be patch repaired by simply sanding back the affected area.

Material Benefits:

- Point impacts (255g ball dropped from 610mm)
- Stain resistant
- Colourfast
- Temperature resistance

FAQs

Q: Are the worktops pre-cut for tap and waste hole?

A: No, they are plain and should be cut according to basin / tap selected. Instruction supplied with worktops to detail

Q: Are the worktops reversible?

A: No, the top (main finish) is polished. Underside is unfinished.

Q: Can I use these worktops on other ranges?

A: Our worktops are designed to be a perfect fit, however it is possible to cut down and repolish edges if required.

Q: How do I install the support braces?

A: Cut the braces to length and apply them to the unit using the included fixings. More details are shown in the instructions.

Q: How many support braces do I need?

A: For 500, 600 and 800 worktops, 2x support braces are needed for one worktop.

For 1000mm and 1200mm worktops, 4x supports are needed, for use with 2x 500mm units or 2x 600mm units.