

## fitting instructions

Please read carefully before attempting to fit the seat. If you are not the end user, please make sure the aftercare instructions are made available for the end user to read.

1. Insert the screws within the hinge anchors, as shown, then fix to the pan using either the bottom fixing or top fixing method. Begin to tighten the screws until they are loosely secured, to allow for adjustment of the seat on the pan. NOTE: for uneven ceramic surfaces use the wedge washer in place of the anchor washer and orient it accordingly.

Maximum adjustment of the pin position is achieved by rotation of the hinge anchor around the screw (adjustment A in the diagram). Further fine adjustment of the pin position can be achieved by sliding the screw in the hinge anchor (adjustment B).

2. Adjust the position of the hinge anchors so that the pins align with the sockets on the hinge. Insert the pins into the hinge sockets and firmly press down until you hear them click into position.
3. Adjust the hinge anchor position to make the seat line up with the pan. When you are satisfied the seat and pan are in the correct position, remove the seat from the hinge anchors (see quick release diagram opposite) and fully tighten the screw / wing nut. Place the cover plates over the hinge anchors and replace the seat and click into position.

## quick release hinges

This toilet seat is designed so that it can be quickly removed for cleaning the toilet pan.

To activate the quick release mechanism lift the lid and seat up.

Press the buttons on the inner ends of the hinges and lift.

To replace the seat align the sockets with the pins and firmly press into position.

## aftercare instructions



Clean surfaces weekly with a soft damp cloth and mild soap solution



Do not scrub or scour




Do not use abrasive cleaning agents




Do not stand on the lid or ring of your toilet seat

## installation

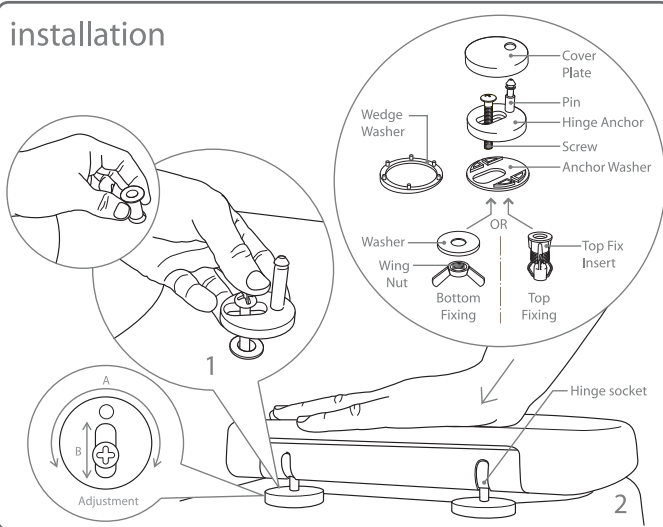


## quick release hinges

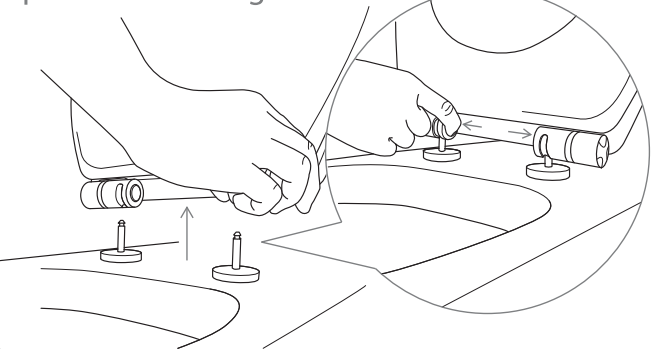


## does it fit?

Please measure before opening the pack

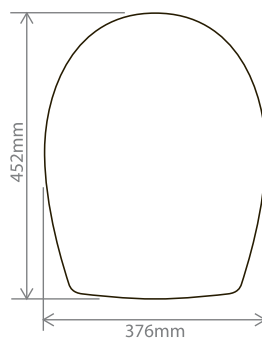

general seat dimensions

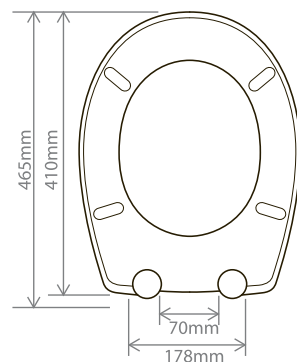

max/min fixing adjustment

Replacement fixings can be obtained directly from Tavistock at the address shown at bottom left.

Please quote the seat product code in all correspondence.